



18x12W LED RGBW Par Light

4 Channels Mode

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright

8 Channels Mode

Channel	Function	Instruction
CH1	Total Dimmer	RGBW Total Dimmer- Dark to Bright
CH2	R Dimmer	Red Dimmer- Dark to Bright
CH3	G Dimmer	Green Dimmer- Dark to Bright
CH4	B Dimmer	Blue Dimmer- Dark to Bright
CH5	W Dimmer	White Dimmer- Dark to Bright
CH6	Total Strobe	RGBW Total Flash Strobe- Slow to Fast
CH7	Function Choice	000~050: CH1-CH6 Control. 051~100: Different Colors output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function/Speed	Slow to Fast (At the Colors output choose the color)





KEYS INSTRUCTION



DIGITAL SHOW FUNCTION FORM

No	Show	Function	Value	Instruction
1	A001	DMX address	001~512	8CH mode UP,DOWN increase or reduce the value
2	d001	DMX address	001~512	4CH mode,UP,DOWN increase or reduce the value,
3	r255	Red dim	000~255	UP,DOWN Change brightness
4	G255	Green dim	000~255	UP,DOWN Change brightness
5	b255	Blue dim	000~255	UP,DOWN Change brightness
6	u255	White dim	000~255	UP,DOWN Change brightness
7	F255	Strobe	010 ~ 255	UP,DOWN change the speed
9	CC15	Colors Jump	00 ~ 15	UP,DOWN change the speed
10	DE15	Colors Credate	00 ~ 15	UP,DOWN change the speed
11	CP15	Colors Pulse	00 ~ 15	UP,DOWN change the speed
12	SoUd	Colors sound- Active	/	Sound-Active