

# RGBW LED Par Light

## AICPOSE



DMX512Control : 8 Channel Model(A001)

CH	Function	Instruction
CH1	Dimmer	R、 G、 B、 W dimmer : from dark to bright
CH2	R dimmer	R dimmer : from dark to bright
CH3	G dimmer	G dimmer : from dark to bright
CH4	B dimmer	B dimmer : from dark to bright
CH5	W dimmer	W dimmer: from dark to bright
CH6	Strobe	R、 G、 B、 W strobe: from slow to fast
CH7	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function speed	Speed function, from slow to fast

DMX512Control : 4Channel Model(D001)

Channel	Function	Instruction
CH1	R Dimmer	Dimmer- Dark to Bright
CH2	G Dimmer	Dimmer- Dark to Bright
CH3	B Dimmer	Dimmer- Dark to Bright
CH4	W Dimmer	Dimmer- Dark to Bright

DMXDISPLAY

No	Show	Function	Instruction
1	d001	DMX Address (001~512)	DMX-512 address set, 4 Channels mode
2	A001	DMX Address (001~512)	DMX-512 address set, 8 Channels mode
3	r255	Red (000~255)	UP、 DOWN Change brightness
4	G255	Green (000~255)	UP、 DOWN Change brightness
5	b255	Blue (000~255)	UP、 DOWN Change brightness
6	u255	white (000~255)	UP、 DOWN Change brightness
7	FH99	Strobe flash (01~99)	UP、 DOWN Change the speed
8	CL01	Different Colors Output (01~08)	UP、 DOWN Change brightness
9	CC99	Colors Jump Change (01~99)	UP、 DOWN Change the speed
10	DE99	Colors Gradate (01~99)	UP、 DOWN Change the speed
11	CP99	Colors Pulse Change (01~99)	UP、 DOWN Change the speed
12	SU01	Colors sound-Active (01~09)	UP、 DOWN Change the effects